


Square Post - Aluminum drive rivets:

There are two primary ways to attach the *Post-Alert* to a square post. The easiest is to attach the *Post-Alert* by using aluminum anti-theft drive rivets. Alternately you may attach the *Post-Alert* with 2 3/4" by 5/16" standard sign bolt hardware.

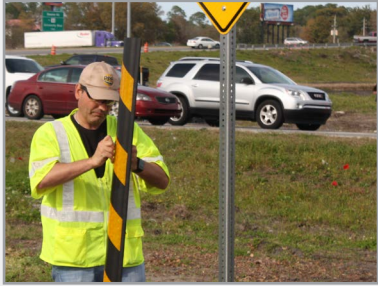

What you need:

- Three Drive rivets
- Three nylon flat washers
- Hammer
- One Post Alert

Installation Steps:

Remember that the MUTCD sign enhancement spec requires the post enhancement device to be the same color as the related sign and to be fastened directly under the sign with no more than 2 feet off the roadway elevation. If using the diagonal object marker style *Post-Alert*, note that the diagonal lines should point downwardly toward the side in which the motorist should travel.

Step 1:

Place the *Post-Alert* flush against the front of the post so that the reflective sheeting is facing the same direction as the sign.




Step 2:

Adjust the direction and height of the *Post-Alert*. Align the pre-drilled holes of the *Post-Alert* to those of the sign post.



Step 3:

Push the drive rivet with the attached nylon flat washer through the *Post-Alert*'s pre-drilled holes and through the sign post holes.

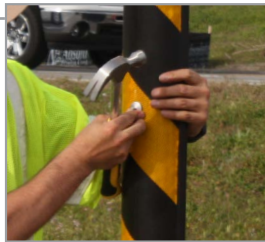

Step 4:

Tap the head of the rivet's pin until it is flush with the *Post-Alert*. Repeat this process for the remaining holes.



Completion

Now your *Post-Alert* is securely fastened to your square post and will improve both the visibility and conspicuity of the sign and it's post, making your roadways safer for both pedestrians and motorists!

